


BUNN JDF-4S: DAILY CARE & CLEANING INSTRUCTIONS


DAILY CLEANING

1. To begin cleaning, you'll need a 32oz minimum empty container.
2. Remove the drip tray, turn on the dispense switch located on the bottom of the machine to the on position. Then, reinstall the drip tray.
3. Open the dispenser door. Lift up on product containers to disconnect them from the machine inlet and store in a separate refrigerated compartment while cleaning.
4. Close the door and place an empty container under the dispensing nozzles.
5. Dispense from each station until clear water flows from the dispensed nozzle.
6. Remove the dispense nozzles and drip tray. Wash all parts in warm soapy water and rinse thoroughly to clean.
7. With a clean damp cloth, wipe down the interior of the cabinet, splash panel and areas around the dispensing nozzles.
8. Replace the drip tray and dispense nozzles.
9. Open the dispenser door and reconnect the product containers for each dispensing station.
10. Dispense from each station until finished product flows from the dispense nozzles.


Pour the concentrate craft beverage from the Combibloc into the dispensing container.

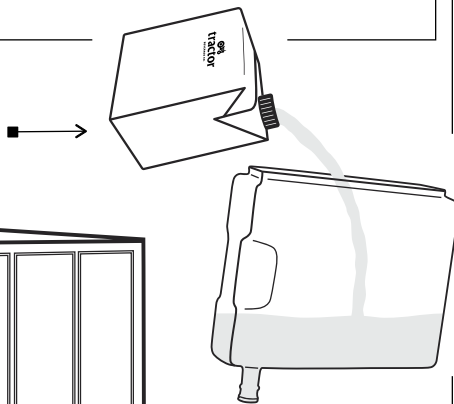

Swing open the unit from the right side.

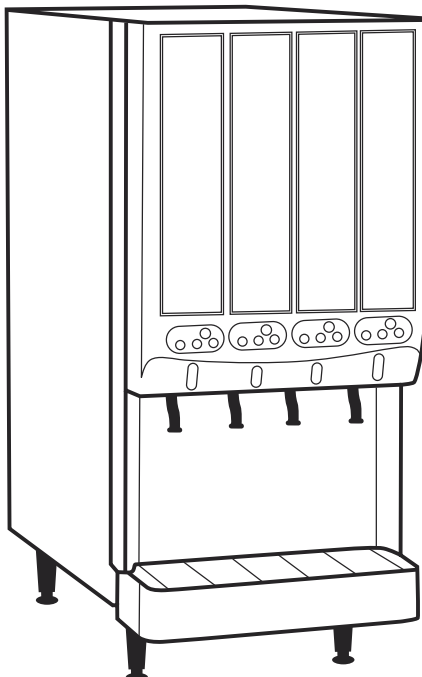


Inside the unit, lift up on the dispensing container to remove for cleaning and refilling.

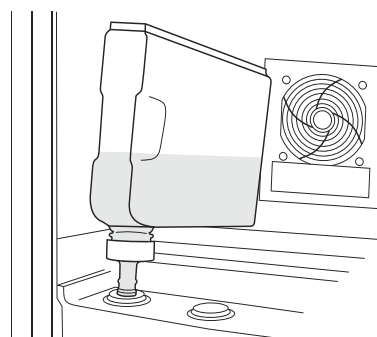

SANITIZING

1. To begin sanitizing, you'll need one empty 5 gallon bucket, two packets of Kay 5 Sanitizer a clean empty concentrate container and a 32oz minimum container.
2. Remove the drip tray and turn the dispense switch on the bottom of the machine to the on position.
3. Remove all concentrate from inside the dispenser and store in a separate refrigerated compartment. Rise the container.
4. Fill the rinsed and emptied concentrate containers with approximately 32oz of hot water. Load the containers of hot water into the dispenser.
5. Place an empty container under the dispense nozzle.
6. Press and hold the dispense button at each station until the stream out of the nozzle runs clear. (This should take about 30 seconds.) Please note: the dispenser will not allow all stations to run at the same time.
7. Once this is completed, remove and empty the containers. Remove the dispense nozzles and rinse under hot water.
8. Dissolve 1 packet of Kay 5 Sanitizer into 2.5 gallons of water at 120 degrees.
9. Place nozzles in a separate 1 quart container of sanitizing solution and allow the parts to soak for 2 minutes. After soaking, use a soft bristle brush to clean the nozzles.
10. Clean the concentrate bottle inlet adapters using the sanitizing solution and a soft bristled brush.
11. Replace the nozzles and be sure to dispose of the sanitizing solution that was just used.
12. Fill approximately 1 gallon of clean sanitizing solution into clean empty concentrate containers and load the containers into the dispenser.
13. Remove the drip tray and place an empty 5 gallon bucket under the nozzles. Press and hold the dispense button for 1 minute dispense time and let soak for 5 minutes.
14. Then press and hold the dispense button for a 2 minute dispense time. When the cleaning cycle is complete, empty the sanitizing solution, rinse containers thoroughly, dry with a clean cloth and replace concentrate.
15. Place an empty container under the dispense nozzles.
16. At each station, press and hold the dispense switch until product appears.
17. Dispense one 12oz glass of finished product and discard.
18. Wipe internal and external surfaces with a clean, damp cloth.

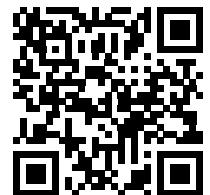

Scan for video